


Abmessungen der FRÖMAG Standard-Nutwerkzeuge Zoll-Abmessungen

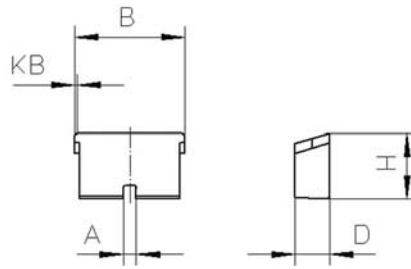

Typ	Ausrüstung	Bohrungsbereich	Breite B		Dicke D	Höhe H	Aufnahme L
		zoll	zoll	mm			
APN71	WA7N	1 37/64 - 1 3/4	7/16	11,11	6	9,3	3
APN72		1 3/4 - 2 1/4	1/2	12,7		10	
APN73		2 - 2 1/4	5/8	15,87		13,5	
AP74	WA7H	2 1/4 - 2 9/16	5/8	15,87	10	12,4	5
AP75		2 9/16 - 2 13/16				15	
AP76		2 1/2 - 2 3/4	3/4	19,05		15	
AP77		2 3/4 - 2 3/8				18,5	
AP79		3 1/8 - 3 3/8	7/8	22,22		17,5	
AP710		3 1/4 - 3 25/64				19	
AP81	WA8	3 3/8 - 3 3/4	7/8	22,22	12	15	5
AP82		3 1/2 - 4 5/8	1	25,4		17,6	
AP83		4 - 5 1/2	1 1/4	31,75		18	
AP91	WA9	5 - 5 7/32	1 1/4	31,75	14	18,5	5
AP92		5 - 5 1/2	1 1/2	38,1		17,6	
AP93		5 1/2 - 6				20,9	
AP94		6 - 6 1/2				25	
AP95		6 - 7 1/2	1 3/4	44,45		25,9	
AP96		7 - 7,5	1 7/8	47,64		28	
AP97		7 - 8	2	50,8		25,4	
AP98		8 - 9	2 1/4	57,15		23	
AP99		9 - 10	2 1/2	63,5		22	
AP910		10 - 11	2 3/4	69,85		22	
AP100	WA010	7 - 8	2	50,8	16	30	6
AP101		8 - 9	2 1/4	57,15			
AP102		9 - 10	2 1/2	63,5			
AP103		10 - 11	2 3/4	69,85			
AP104		11 - 12	3	76,2			
AP105		12 - 13	3 1/4	82,55			
AP106		13 - 14	3 1/2	88,9			
AP107		14 - 15	3 3/4	95,25			
AP108		15 - 16	4	101,6			
AP109		16 - 17	4 1/4	107,95			
AP1010		17 - 18	4 1/2	114,3			
AP1011		18 - 19	4 3/4	120,65			
AP1012		19 - 20	5	127			